## 0114

# Safety Guidance



### **Using the Poker Vibrator**

- 1. Wear protective equipment including gloves, goggles and safety boots.
- You may need to allow the unit to warm up for a few minutes in cold weather for maximum efficiency.
- If the vibrating head does not vibrate when the machine is started, tap the nose onto a hard surface. Do not tap or hit the outer housing of the head.
- 4. Watch out for signs that vibration may be affecting your hands. If fingers start to tingle or feel numb, take a short break from using the machine. Exercise fingers to encourage blood circulation. Find out more about vibration. Ask the hire company for a copy of the HAE leaflet no. 2150 Hand-arm vibration or visit www.hse.gov.uk/vibration
- 5. To help prevent vibration affecting hands, operate the machine for shorter periods, or share the job with a workmate. Keep hands warm wearing gloves may help do this.
- 6. Take care not to bend the flexible drive through tight angles, for example over shuttering.
- 7. Always move and withdraw the vibrating head steadily this will help avoid creating voids.
- 8. Do not touch the vibrating part of the poker while it is in operation.
- **9.** Do not lay the vibrating poker on a hard surface while it is still vibrating. It will cause damage to the surface and the poker.
- 10. Do not disengage the flexible drive coupling while the motor is running.
- 11. Take care not to accidentally pull the plug from the socket.
- 12. Stop the unit and unplug it if leaving the machine unattended.
- 13. If the cable is found to be cut or damaged in any way, switch off and unplug at the socket before inspecting it. If the cable attached to the drive unit is damaged, stop using the machine. Contact the hire company. If an extension cable has been damaged, do not use it again.
- 14. The poker vibrator must be cleaned as soon as work is finished before any concrete on it goes hard.
- 15. If the flexible drive has been disengaged, take care to keep the open end of it clean do not leave it lying in dirt.
- 16. If the equipment does not work properly do not attempt to repair it. Contact the hire company.
- 17. You may want to read this leaflet again. Please keep safely it until you finish work.

















44 (0) 121 380 4600 44 (0) 121 333 4109 mail@hae.org.uk www.hae.org.uk

## **Poker Vibrator**

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

### It is important to read all of this leaflet BEFORE using the Poker Vibrator

- Plan your work and think ahead to make sure you will always be working safely.
- If you have not used this type of poker vibrator before, familiarise yourself with how the machine works before you start on the main task.
- 3. Electricity is dangerous and must always be used with great care.
- Electricity and water make a very dangerous combination. Keep electrical equipment away from rain and water.
- Cement mixes are harmful to eyes, lungs and skin. Take precautions to prevent contact with cement mix.
- 6. This poker vibrator is designed for use in fresh concrete to remove air voids and speed the release of trapped water. It is not designed for any other purpose.
- The action of this poker vibrator can cause injury or damage if the machine is not used in a careful and controlled way.
- 8. The following items of personal protective equipment must be worn: goggles; dust mask- a minimum of FFP3 protection; ear muffs or plugs giving protection to reduce exposure to 87dB(A) at the ear; Safety boots; industrial quality gloves; residual-current device (RCD) if using a 230 volt (mains) supply.
- 9. A personal first-aid kit should be available.
- This machine must not be used by young persons, or by anyone under the influence of drugs or alcohol.
- 11. This poker vibrator is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
- 12. Some poker vibrators are heavy machines, get help if you have to unload it from your vehicle. Do not lift beyond your own capabilities.





 










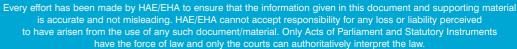

### **BEFORE STARTING WORK CEMENT MIXES AND CONTACT DERMATITIS**

- 1. Wet cement mix is a substance that can cause contact dermatitis.
- 2. Contact dermatitis is a rash that may occur when the skin reacts to certain substances. The rash can vary but it is usually itchy and causes flaky skin and only occurs where the substance is in contact with the skin.
- 3. Wash cement or plaster mixes from skin immediately. Thoroughly rinse out eves and seek medical advice immediately.
- Mild dermatitis will heal providing there is no further contact. If the rash persists seek medical advice. Learn more about contact dermatitis - visit www.bcds.org.uk
- Gloves, long sleeves and full trousers must be worn to prevent the mixes coming into contact with bare skin

#### **WORK AREA**

- 1. Do not use this machine where there is a danger of explosion. It will ignite fumes from petrol, or gas cylinders.
- 2. Make sure that the work area is clear and safe and that no-one is close by and could cause distractions.
- Protect other people from the noise and wet cement. Warn others to keep away, set up an exclusion zone around the area where the poker vibrator is being used with physical barriers, barrier tape and signs. Keep children and animals away when using this equipment.
- 4. Work should stop immediately should anvone, other than those directly assisting with the work, enter the exclusion zone.
- 5. Clear the area of trip hazards such as rubble, rubbish etc.
- Position the drive unit so that you can easily reach all of the concrete you need to work on. Make sure that the flexible drive is not going to be damaged by traffic, or create an obstruction.

### **Before Starting Work...**











- Check that the plug on the machine matches the supply. Do not try to force connections or improvise them.
- 3. Machines with a cylindrical yellow industrial plug fitted are designed to run off an 110v supply. The hire company will have provided a portable transformer if the machine needs to be powered from a normal mains 230v supply. If a portable transformer has been supplied, take care not to injure yourself when moving it about - it may be heavier than you think. Machines designed to run directly from 230v mains will have either a normal square pin plug fitted, or a blue industrial plug, which must be connected through a residual-current device (RCD).
- Check on how the on/off switch operates before switching the vibrating poker on, locate the stop control. Make sure that the vibrating poker is switched off before plugging it into the supply.

### **ELECTRICAL SAFETY**

The machine will only operate on one voltage: it will be 110v or 230v.

110v machines will have a vellow industrial plug fitted. 230v machines will have either a normal square pin plug fitted, or a blue industrial plug. Read the instructions below for your machine.

#### 110 VOLT MACHINES (YELLOW PLUG)

1. If a portable transformer requires to be used, plug the transformer directly into the 230 volt socket. Do not use any 230v extension cables.

- 2. If an extension cable is required, follow any special instructions given by the hire company. If the hire company has not given any special instructions, a suitably rated heavy duty 110v extension cable should be used, not longer than 50 metres (160 feet). An extension cable must only be used between the transformer and the machine.
- Lay the extension cable out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
- 4. Make sure that any extension cable connections are dry and safe.

### 230 VOLT MACHINES (SQUARE PIN OR BLUE PLUG)

- 1. Use a residual current device (RCD) plugged directly in to the 230volt socket. Plug the machine into the RCD. This will help to protect against electric shock if the cable or machine gets damaged.
- 2. Use the "TEST" button to check that the RCD is working each time it is used. Reset the RCD according to the instructions supplied with it.
- If an extension cable is required to be used, follow any special instructions given by the hire company. If the hire company has not given any special instructions, a suitably rated heavy duty extension cable must be used, not longer than 50 metres (160 feet). Plug it directly into the RCD.
- 4. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
- 5. Make sure that any extension cable connections are dry and safe.

#### Summary:

110V: Wall socket > transformer > any necessary extension cable > poker vibrator.

230v: Wall socket > RCD > any necessary extension cable > poker vibrator.





**OPERATORS** 

the machinery.

this machine.

wet concrete.

this level as a minimum.



1. The following items of personal protective

equipment (PPE) are the minimum that

should be worn whenever the poker

vibrator is used. Particular jobs or

environments may require a higher level of

protection. Ensure there is no loose or

flapping clothing that could get caught in

Gogales must be worn when working with

levels up to 93 dB(A) - wear appropriate ear

muffs or plugs giving hearing protection for

Safety boots/wellingtons must be worn.

Remember that you may have to stand in

Vibration from using this machine can be

hazardous. Warm hands up before starting

work, and wear industrial quality gloves to

keep hands warm while working. Find out

more about the effects of vibration - Ask

the hire company for a copy of the HAE

leaflet no. 2150 - Hand-arm vibration or

Industrial quality gloves, long sleeves, and

mixes coming into contact with bare skin.

7. Anybody who is working close by will also

1. Check the drive unit, flexible drive and

vibrator. Contact the hire company.

full trousers must be worn to prevent the

need to wear identical personal protective

couplings, and vibrating head. If anything is

found to be damaged, do not use the poker

visit www.hse.gov.uk/vibration

3. This equipment is likely to cause noise





Email: website:

equipment.

**POKER VIBRATOR** 

Telephone: 44 (0) 121 380 4600 44 (0) 121 333 4109 mail@hae.org.uk www.hae.org.uk