 


60LB ECONOMICAL WALK-BEHIND SPREADER

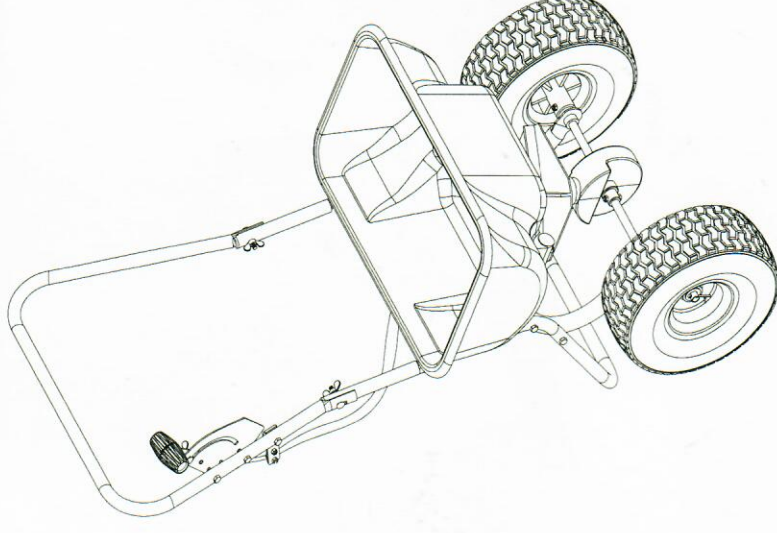

Instruction & Assembly

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Table of Contents

General Warnings and Rules	3
Hazard Signal Word Definitions	4
Component & Hardware	5
Assembly Instructions	6, 7
Parts Drawing & Parts List	8, 9

⚠ GENERAL WARNINGS ⚠

READ and UNDERSTAND this manual completely before using Push Spreader.

Operator must read and understand all safety and warning information, operating instructions, maintenance and storage instructions before operating this equipment. Failure to properly operate and maintain the push spreader could result in serious injury to the operator or bystanders.

Operation Warnings

- Do not at any time carry passengers sit or stand on the spreader.
- Do not allow children to play on, stand upon or climb in the spreader.
- Always inspect the spreader before using to assure it is in good working condition.
- Replace or repair damaged or worn parts immediately.
- Always check and tighten hardware and assembled parts before operation.
- Avoid large holes and ditches when transporting loads.
- Be careful when operating on steep grades (hill) the spreader may tip over.
- Do not push close to creeks, ditches and public highways.
- Do not use spreader on windy days when spreading grass seed or herbicides.
- Always use caution when loading and unloading spreader.
- Never tow the spreader with a motorized vehicle.

Crush and Cut Hazards

- Always keep hands and feet clear from moving parts while operating the equipment.
- Always clear and keep work area clean when operating.
- Always wear safety gear, eye protection, gloves and work boots when operating the spreader.

⚠ WARNING

The warnings, cautions, and instructions outlined in this instruction manual cannot cover all possible conditions or situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product and must be supplied by the operator.

⚠ PROP 65 WARNING

This product contains chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

Assembly Is Required

This product requires assembly before use. See "Assembly" section for instructions. Because of the weight and/or size of the push spreader, it is recommended that another adult be present to assist with the assembly. **INSPECT ALL COMPONENTS** closely upon receipt to make sure no components are missing or damaged.

Hazard Signal Word Definitions

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
	CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

ABOUT YOUR PUSH SPREADER

This push spreader is designed to spread a wide range of materials (Fertilizer, Grass Seed and Ice melt). Materials such as Powders, Manure, Top Soil, Gravel, and Mulch have the wrong physical characteristics and should not be used with this spreader. Never exceed the rated load capacity of 60lbs when operating the spreader.

Your spreader needs to be pushed at three miles per hour, which is a brisk walking speed. Slower or faster speeds will change the spread patterns. Wet spreading material will also change the spread pattern and flow rate. Clean your spreader thoroughly after each use. Wash between the shut off plate and bottom of the hopper.

CAUTION

Read and follow all instructions for assembly and operation. Failure to properly assemble this equipment could result in serious injury to the user or bystanders, or cause equipment damage.

PUSH SPREADER COMPONENT PARTS AND ASSEMBLY.

 
Take all parts out of the shipping crate and inspect components to ensure there are no missing pieces before starting to assemble the push spreader follow steps 1 through 2.

Component Parts

Connecting Rod
2pcs




Hopper Assembly
1pc

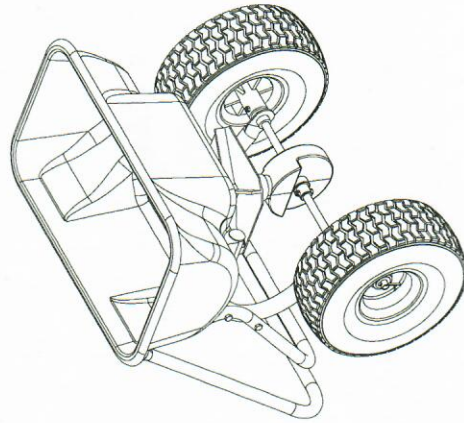


Assembly Instructions

STEP 1: Attach the Handle to the Hopper Assembly

 1. Attach the Connecting Rod to the Hopper Assembly by using Round Head Bolt M6x35, and tighten with Wing Nut M6.
2. Attach the Handle to the Connecting Rod by using Round Head Bolt M6x35, and tighten with Wing Nut M6.

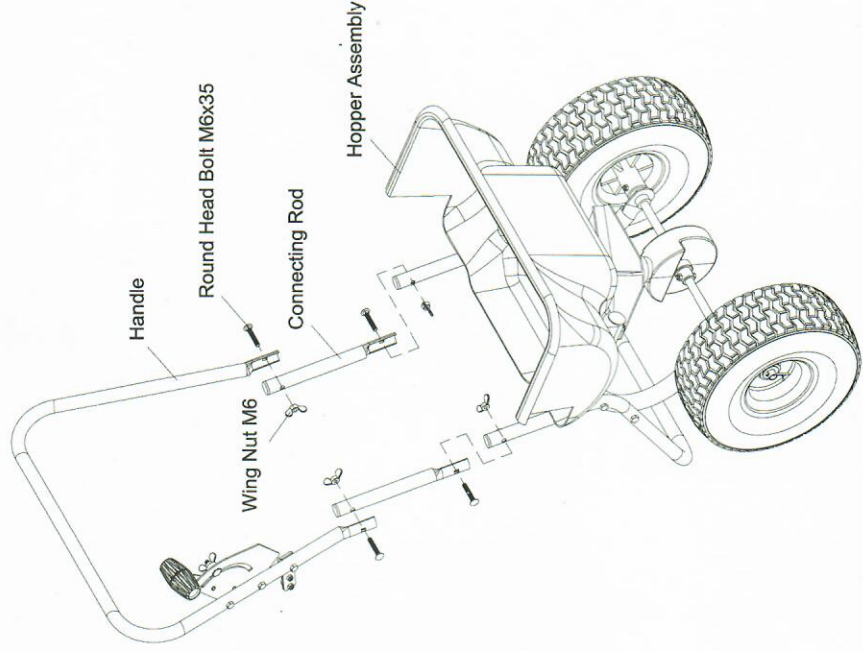


Parts Drawing & Parts List

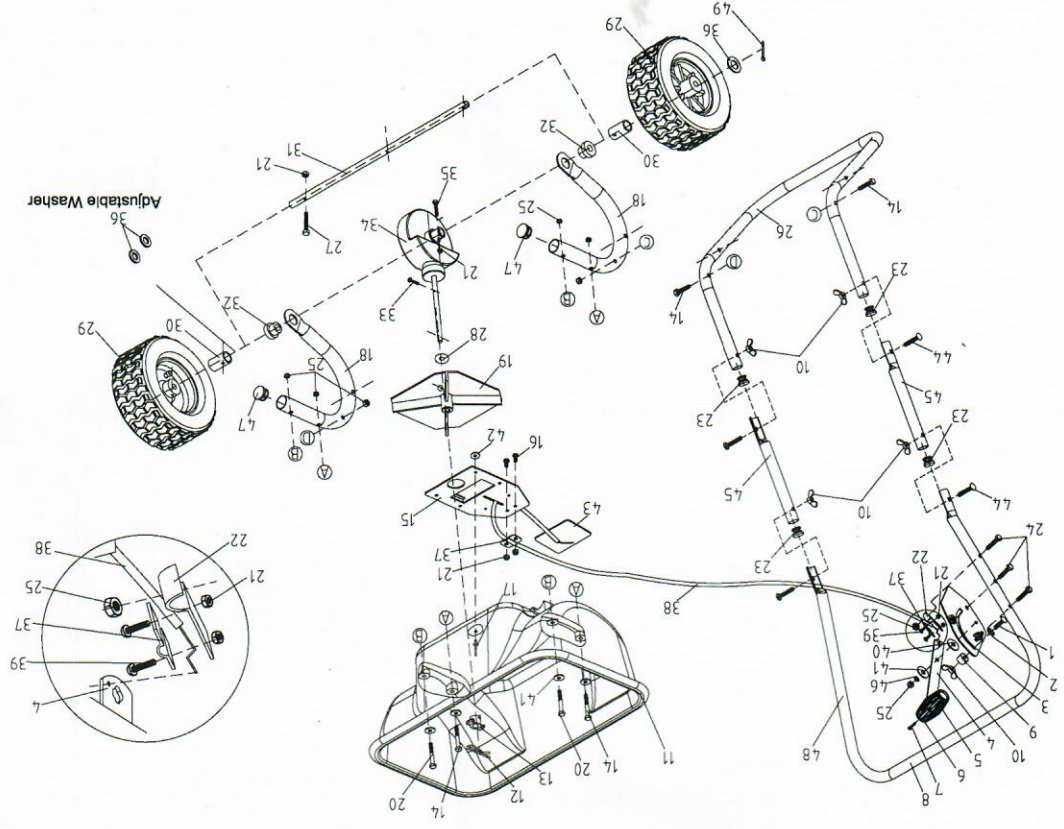 

STEP 2: Adjusting the Flow

 1. Adjust the two nut M6 on pivot bracket, make the hole on the fixed adjustable plate open completely.
2. To operate this spreader, push the adjust handle to the lowest position (downwards).
3. Push the Adjust Handle Pole to the top position, make the holes on the Fixed adjustable plate closed completely.
4. You may move the position of wing nut on the gauge & lever to adjust the space on the hole between the hopper and the adjustable plate as per your need when spreading.

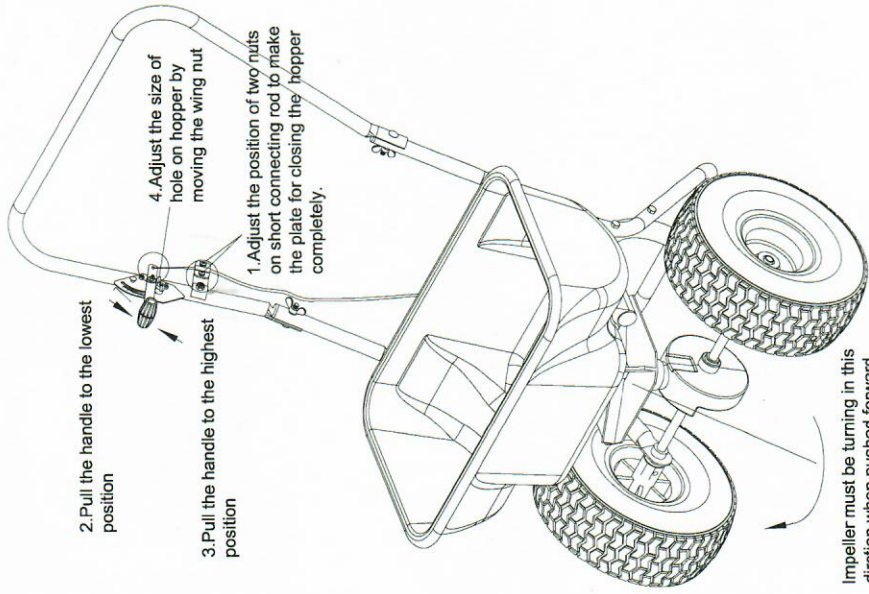

NOTE: ADJUSTMENTS. When you have finished all above steps, and if you find the holes at the bottom of hopper can be closed and opened completely by using the handle. You don't need to do the upper steps. If it cannot be closed and opened completely, you may need to do the upper steps.

Parts Drawing & Parts List

Ref#	Description	Qty	Ref#	Description	Qty
1	M6x25 Carriage Bolt	1	26	Rear Support Leg	1
2	Ø8 External- Tooth Washer	1	27	Hex Bolt M5x40	1
3	Gauge and Lever Assembly	1	28	Thin Washer	1
4	Adjust Handle Pole	1	29	Wheel	2
5	Adjust Handle A	1	30	Wheel Spacer Bush	2
6	Adjust Handle B	1	31	Wheel Axle	1
7	M4x18 Tapping Screw	1	32	Axle Bushing	2
8	Handle Grip	1	33	M4x20 Screw	1
9	Spacer	1	34	Gear Box & Axle Assembly	1
10	M6 Wing Nut	5	35	M5x25 Hex Bolt	1
11	Hopper	1	36	Flat Washer Ø12	3
12	R Pin	1	37	Link Clamp Press Plate	2
13	Center Cover	1	38	Adjustable Control Cable	1
14	M6x50 Hex Bolt	6	39	Screw M5x10	2
15	Fixed Adjustable Plate	1	40	Nylon Washer	1
16	Screw M5x12	2	41	Ø6 Big Flat Washer	5
17	Rivet Ø5x13	4	42	Flat Washer Ø5	4
18	Wheel Tube	2	43	Active Adjustable Plate	1
19	Impeller	1	44	M6x35 Carriage Bolt	4
20	M6x45 Hex Bolt	2	45	Connecting Rod	2
21	Hex Lock Nut M5	6	46	Lock Washer Ø6	1
22	Link Clamp Bottom Plate	1	47	Tube End Cap	2
23	End Cap	4	48	Handle	1
24	M6x30 Hex Bolt	3	49	Cotter Pin Ø4x40	1
25	M6 Lock Nut	12			