

Using the Fan Heater

1. Make sure the heater is sited in a safe secure place before switching on.
2. Switch off, remove the plug and allow the heater to cool before moving it.
3. Switch off and remove the plug if you are not using the heater.
4. The heater will remain hot for some time after use. Make sure no-one touches it.
5. If you think the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the heater is damaged, stop using the heater. Contact the hire company.
6. Take care not to accidentally pull the plug from the socket.
7. If your equipment does not work properly, do not attempt to repair it. Contact the hire company.
8. You may want to read this leaflet again. Please keep it until you have finished work.

Please keep this leaflet safely as it may be required for future reference


Fan Heater

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

Consult with a competent person regarding the use of electric fan heaters and the loading capacity of the electrical installation at the applicable location.

It is important to read this entire leaflet BEFORE using the Fan Heater

1. Plan your work and think ahead to make sure you will always be working safely.
2. Electricity can be hazardous and must always be used with great care.
3. This fan heater is designed to provide a steady flow of hot air into an unobstructed space. It can be used for heating and drying areas.
4. The fan heater can cause injury or damage if it is not used in a careful and controlled way.
5. If you have not used a fan heater before, familiarise yourself with how the equipment works before you start to use it.
6. Use of a residual current device (RCD) is recommended to protect against electric shock if the equipment uses a 230-volt (mains) supply.
7. This heater must not be used by minors, or by anyone under the influence of drugs or alcohol.
8. This heater is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.

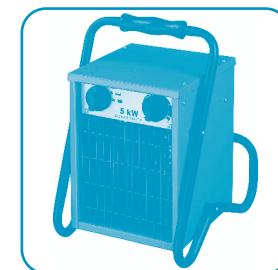

Before Starting Work...



WORK AREA

1. Do not use this fan heater anywhere there is a danger of explosion. It will ignite fumes from petrol, or gas cylinders.
2. Site this heater in a safe place away from walls or other obstructions to prevent them from being scorched or burnt.
3. Protect other people from the heat. Warn others to keep away, put barriers up to prevent people getting too close to the heater.
4. If you are drying an area, you must allow adequate ventilation for the evaporated moisture to disperse.
5. This heater can be left unattended once it has been set up safely.
6. Do not use this heater outdoors or where it might get wet.

FAN HEATER

1. Check your heater, cables, plugs and equipment. If anything is found damaged, do not use the equipment. Contact the hire company.

2. Check that the plug on your heater matches your supply. Do not try to force connections or improvise them.
3. Heaters with a cylindrical yellow industrial plug fitted are designed to run off a special 110v supply. Consult with the Hire Company supplying the equipment to ensure that you have the correct type and rated transformer for use with the heater provided. If a portable transformer has been supplied, take care not to injure yourself when moving it about – it may be heavier than you think. Heaters designed to run directly from 230-volt mains will have either a normal square plug fitted or a blue industrial plug.
4. Do not cover or block air intakes and outlets while the heater is in use.
5. Do not stand anything on top of the heater.
6. Do not allow anyone to stand in front of the hot airflow. They may be burnt.
7. This heater can be left unattended once it has been set up safely.

8. While using, and for some time after use, avoid touching parts of the heater, which will remain very hot.
9. Check on how the on/off switch operates before you switch the fan heater on, you must know how to switch it off.

ELECTRICAL SAFETY

Your heater will only operate on one voltage: it will be 110v or 230v. 110v heater will have a yellow industrial plug fitted. 230v heaters will have either a normal square plug fitted, or a blue industrial plug. Read the instructions below for your heater.

110 VOLT MACHINES (YELLOW PLUG)

1. If you are using a portable transformer, plug the transformer directly into the 230v socket. Do not use any 230v extension cables. Consult with the Hire Company supplying the equipment to ensure that you have the correct type and rated transformer for use with the heater.



2. Do not use an extension cable with this equipment.

230 VOLT MACHINES (SQUARE PIN OR BLUE PLUG)

1. Use of a residual current device (RCD) is recommended to protect against electric shock if the equipment uses a 230-volt (mains) supply. This will help to protect you against electric shock if the cable or heater gets damaged.
2. Use the "TEST" button to check that the RCD is working each time you use it. Reset the RCD according to the instructions supplied with it.
3. Do not use an extension cable with this equipment.

