

Betore Starting Work

For guidance on managing

construction health risks go to www.hse.gov.uk/construction

Using the Floodlight Propane gas is highly flammable and must always be used with great care.

This floodlight is designed to provide general illumination in remote outdoor

The floodlight must not be used where there is a fire risk from combustible

materials, or flammable liquids and gases. Make sure there is no paper or other

light, flammable materials that could be carried towards the floodlight by air flow.

Heated air and direct radiant heat from the floodlight can damage nearby objects

as well as presenting a fire risk. Make sure that there are no objects near enough

Plan the use of the floodlight so that it can always be used safely. It should not

This floodlight must not be lit, moved, or adjusted, and the gas cylinder must not be

This floodlight is designed for operation by an able bodied adult. Anyone with

either a temporary or permanent disability must seek expert advice before using it.

44 (0) 121 380 4600

44 (0) 121 333 4109

tiames nearby, and that the area is

Make sure that there are no naked

With the flame out, allow the light to

completely. If the flame does not go out, call the hire company

Wait until the flame has gone out

cylinder valve fully clockwise to the OFF position.

The floodlight should be turned off by turning the handwheel on the

Operators must make sure that they understand all of the controls. Before the floodiight is lit it must be

The floodlight should never be

public are allowed, barriers may be needed around lighting stands to keep people away from the heat, and to prevent them tampering with the light.

In areas where members of the

Make sure there are no papers or other light materials that could be carried towards the floodlight by air

All no not server a stability of the notability of the notability where it may get hot. The floodlight, where it may get hot analytic the spect of the spect of the spect of the spect of be lift.

CHANGING THE GAS CYLINDER

known how to turn it off.

.fil si fi nedw bevom

.4

- 2

.s

'6

.8

-2

-9

·'9

.tdpil

лочетел.

the floodlight.

SIUI

cool down.

immediately.

ae.org.u e.org.uk

Please keep this leaflet safely as it may be required for future reference

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

Cylinders must not be stored in occupied domestic premises.

be left unattended if there is any risk of fire or burns to persons.

Hire Association Europe

gham Busin olihull B37 7YE

2450 Regents Court

The Crescent

rue une company.

immediately.

CONTACT

'iauupda

.8 -8

-9

**'**G

well ventilated.

properly, attempts should not be made to repair or adjust it. Contact

that the valve handwheel is turned fully clockwise to the OFF position.

connection is not gas tight, the

tightened tully using the correct

indiantegration of the connector should should should should be set in the connector is threaded properly, it connector is threaded properly, it should be done up hard-tight, then the properly it with the set of the set

on the regulator is clean and undamaged. The connector should

same, the empty cylinder must be moved to a safe location.

If the valve connections are the

refitted to the old cylinder, and the

the threads are undamaged. If it is different the new cylinder must not be fitted. This could be very eld blue should be the short of the fitted to the short of the short of

on the new cylinder is the same as the one on the old cylinder, and that

of the valve on the new cylinder and fit it to the old cylinder.

This union has a left hand thread. If the light is fitted to the cylinder it should be unclamped, and re-fixed securely to the new cylinder. Take any plastic protective plug out of the new cylinder and

Unscrew the regulator connecting union using the correct spanner.

Check that the valve connection

10. Check that the threaded connection

11. If it is suspected that the cylinder

alıre

company

auı

12. If the floodlight does not work

əu

changed, by minors, or by anyone under the influence of drugs or alcohol.

locations, on site, and in other well ventilated locations.

to the floodlight to get hot.

2.

3.

5.

6.

7.

## ΥΤΞΊΑΖ ΖΑΘ ΞΝΑΊΟΡΑ

- Keep gas cylinders upright at all times whether in use, in store or being moved.
- stored inside a building, even when they appear to be empty. Propane gas cylinders should not be <del>.</del>ح
- Any appear to be any provided the first of the start of t 31
- Never look for a leak with a naked flame this is always extremely dangerous. Use soapy water. dangerous ·t .swopulw
- ۰ç
- If the cylinder is leaking, call the fire brigade and evacuate the area.
- No attempts should be made to repair suspected leaks. Contact the hire company immediately. '9
- -7
- on a gas cylinder that is in use. This indicates that the cylinder is not big errough to provide the flow of gas being used. Contact the hire In some conditions, frost may form
- company.
- The cylinder must not be warmed to remove the frost. Care must be taken when handling a frosty eviloner as the cold can cause "frost' .8
- suna cylinder as the cold can cause 'frosi
- Handle cylinders carefully when .6
- dropped off vehicles assistance

- must be sought to lower them safely.

- 10. Unused and empty cylinders must be kept away heat at all times.

1. Do not use this floodlight where

ΒΕΓΟRΕ USING THE FLOODLIGHT

**WORK AREA** 

**3YT TEB Iludilos** 

The Crescent Birmingham Business Park

vesociation ⊨urope

1022 Safety Guidance

It is important to read this entire leaflet

**BEFORE using the Floodlight** 

1. Propane gas is highly flammable and must always be used with great care. Cylinders must not be stored in

This floodlight is designed to provide general illumination in

remote outdoor locations, on site, and in other well ventilated

The floodlight must not be used where there is a fire risk

left unattended if there is any risk of fire or burns to persons.

:lism3

:euoudeie

improvisea.

LPG FLOODLIGHT

premises or small rooms.

occupied domestic premises.

floodlight by air flow.

to the floodlight to get hot.

locations

to have arisen t

mail@hae.org.uk www.hae.org.uk

44 (0) 121 333 4109

be placed on or directly in front of

Clothes or other materials must not

wind, and other hazards which may

directly to gas cylinders a location should be chosen where they are people, water, rain, strong gusts of wind and other hazards which may

For stand lights, and lights fixed

Connections should not be forced or

the valve on the cylinder. This connection has a left hand thread.

Check that the gas regulator/ connector on the floodlight matches

be used. Contact the hire company.

Check the floodlight, including the gas hose, clamp or stand, and cylinder. It anything is found not damaged, the floodlight should not be the stored postage to the stored to be available to the stored postage to the sto

requirements of this floodlight it is not suitable for use in occupied

does not get a good supply of fresh air, the gas will not burn properly. Funnes from this incomplete combustion are very dangerous. Because of the heat and ventilation requirements of this follopting it is

there is adequate ventilation or a supply of fresh air. If the floodlight

outdoors, or in open spaces where I he floodlight must only be used

materials, or flammable liquids and

there is a fire risk from combustible

damage them or knock them over.

5

6

**Floodlight** 

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

from combustible materials, or flammable liquids and gases. Make sure there is

no paper or other light, flammable materials that could be carried towards the

Heated air and direct radiant heat from the floodlight can damage nearby objects

as well as presenting a fire risk. Make sure that there are no objects near enough

Plan the use of the floodlight so that it can always be used safely. It should not be

This floodlight must not be lit, moved, or adjusted, and the gas cylinder must not

be changed, by minors, or by anyone under the influence of drugs or alcohol. This floodlight is designed for operation by an able bodied adult. Anyone with either a temporary or permanent disability must seek expert advice before using it.

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting materia

from the use of any such document/material. Only Acts of Parliament and Statu have the force of law and only the courts can authoritatively interpret the law.

is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perc nave arisen from the use of any such document/material. Only Acts of Parliament and Statutory Ins

3

.S

1

3

·7

v:122016