1615 Mower - self propelled 4 stroke petrol



Using the Lawn Mower

- Wear your protective equipment including ear defenders and strong footwear.
- If your mower has a grassbox, do not run it without the grassbox correctly fitted. Stop the engine before you empty the grassbox
- Always hold the mower handle firmly with both hands while working.
- Keep your hands and feet clear of the blades at all times.
- Do not let the blades rotate when moving over paving or hard ground, or when first positioning the mower to start work.
- Do not tilt the mower to expose the blades when they are still rotating. You might accidentally put your foot into the danger area. The blades may also throw out stones and
- While working, keep a lookout for any stones or other objects in your path. Stop the engine and clear them out of the way.
- 8. Stop work and stop the engine if someone approaches you.
- If the mower starts to labour and slow down, raise the cutting height so you are removing less grass. Make a second pass later, with a deeper setting.
- Stop the engine every time you empty the grassbox.
- 11. Stop the engine and disconnect the spark plug lead before making any adjustments other than height of cut.
- 12. Stop the engine before leaving the machine unattended.
- If debris or rubbish gets tangled in the blades, stop the engine and disconnect the spark plug lead before clearing the blockage or working on the mower.
- Clean the machine at the end of each day, and before you return it to the hire company. Make sure that there are no grass cuttings near the exhaust. Wear your gloves - the exhaust will be hot.
- 15. Let the exhaust and engine cool down before you put it into store.
- 16. If your equipment does not work properly, do not attempt to repair it. Contact the hire
- You may want to read this leaflet again. Please keep it until you finish work.

Please keep this leaflet safely as it may be required for future reference







2450 Regents Court

The Crescent







44 (0) 121 333 4109



Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

infottle, before starting work. eugine warm up by gently opening the In cold weather, you may need to let the Pull the starting cord again.

throttle lever is in the correct position. there is sufficient petrol, and that the If the engine did not start, check that

Guide the cord back into place so that it bull it too tar, or the cord may break.

the starter has engaged with the engine, then pull it quickly and strongly. Don't cord handle slowly until you can feel that 6. With your right hand, pullout the starting buil the starting cord.

hand, so that it will not move when you Hold the machine firmly with your left

.noitisoq TAATS Check that the throttle lever is in the Open the fuel valve by the fuel tank.

including long grass, under the mower. Check that there is no obstruction,

instructions given below. special instructions for your mower, follow the motor. If the hire company has given you while the engine is running. Larger lawn mowers may have an electric starter lawn mowers have a blade brake that needs to be held in during starting and 1. This section describes the starting procedure for most lawn mowers. Some

STARTING THE ENGINE

move your fuel can to a safe, cool place. 9. Put all fuel caps back on properly, and

cuange mem straignt away. If you spill any fuel on your clothes,

up or cover it with soil. 7 If you spill any fuel on the ground, wipe it of fuel soaked cloth carefully.

yourself or the machine. refuelling. Do not spill any fuel on Use a funnel and clean petrol when

it to prevent dirt falling into the fuel tank. Clean the filler cap and the area around area. Spilt petrol will kill grass.

Stop the engine and let it cool down.

.2

1. No smoking.

mower, you must know how to control it controls. Before you start the lawn 10. Make sure you understand all of the

the machine ready to start. blades rotating, to enable you to position can be engaged without having the On some mowers, the driving wheels

control. Release the control levers and while working, do not fight to regain 8. If the lawn mower gets out of control





Self Propelled Lawn Mower

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read this entire leaflet **BEFORE** using the Lawn Mower

- This leaflet gives instructions for self-propelled petrol lawn mowers. It is not to be used with ride-on mowers
- Petrol is highly flammable. Take care not to cause a fire or
- This lawn mower is designed for cutting grass on flat and level surfaces. It should not be used on wet, thick or overgrown grass, or on steep slopes
- The action of this lawn mower can cause injury or damage if the equipment is not used in a careful and controlled way.
- If you have not used a self-propelled lawn mower before, practise in the middle of your lawn until you are confident about using it.
- Plan your work and think ahead to make sure you will always be working safely.
- You should have at least the following items of personal protective equipment. ear muffs or plugs giving protection for levels up to 96 dB(A); strong boots or shoes giving good foot protection; strong gloves.
- This equipment must not be used by minors, or by anyone under the influence of drugs or
- This lawn mower is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.















Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting materia is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability pero-nave arisen from the use of any such document/material. Only Acts of Parliament and Statutory Ins from the use of any such document/material. Only Acts of Parliament and Statu have the force of law and only the courts can authoritatively interpret the law.

44 (0) 121 380 4600 44 (0) 121 333 4109

BAY 788 Iludilos The Crescent Birmingham Business Park noo sinegen uch



any rubbish or debris in the grass. You will need strong gloves to handle

poots diving good foot protection. You will need to wear strong shoes or brotection for this level.

ear muffs or plugs giving hearing levels up to 96 dB (A) - wear appropriate This equipment is likely to cause noise

level of protection. or environments may require a higher you use this lawn mower. Particular jobs minimum that should be worn whenever protective equipment (ppe) are the 7. The following items of personal

SHOTARIANO

your gloves while you do this. fly out or damage the machine. Wear lengths of wire or anything else that may e of large stones, pieces of wood, Make sure the area you are about to cut

machine to do this. Contact the hire company if you need a Do not use this mower on steep slopes

10metres (33 feet) away. from injury. Keep other people at least Protect other people from the noise and

and that no-one is near to you or could Make sure that the area is clear and safe

have good ventilation. run or test the engine indoors unless you injury from breathing toxic fumes, do not To reduce the risk of serious or tatal

fumes from petrol, or gas cylinders. s a danger of explosion. It will ignite Do not use this lawn mower where there

WORK AREA

Wipe any fuel off the machine. Dispose

Move the machine away from your work

BEFUELLING

and stop it sately.

the mower will immediately stop.

will stop moving if you release the control In either case the self propelled mower

also have an emergency stop lever, release the clutch lever. These models transmitted to the wheels until you On other mowers, drive is 10u squeeze the clutch lever in. transmitted to the wheels until you

which stops the mower if the lever is

with both hands when cutting the grass. Always hold the lawn mower correctly

grass with a lower cut setting. mower. You can then go back over the damaging the grass and overloading the If you plan to cut long grass, set the cut high to start with. This will avoid

removing the grassbox. free to move when attaching and outlet is securely fixed to the mower, but Make sure that the guard over the grass

the iawn mower - contact the nice anything is found damaged, do not use and grass box, and all equipment. If 1. Check your machine, engine, guards

LAWN MOWER

company.

otective equipment. also need to wear appropriate personal **Απλ**εοαγ who is working near to you will

