



# Using the Catering Urn

1. Fill with clean water to the level indicated before plugging in and switching on.
2. The thermostat will switch the electric on and off to keep the water at the temperature you have set. You must ensure that the clean water is topped up regularly as it is used.
3. Keep the cable clear of any sharp edges in your work area. Do not allow the cable to be walked on or to become a trip hazard.
4. If you think the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the catering urn is damaged, stop using the equipment. Contact the hire company. If an extension cable has been damaged, do not use the extension cable again.
5. Take care not to accidentally pull the plug from the socket.
6. Switch off and remove the plug from the socket then allow the catering urn to cool down before leaving unattended.
7. Do not move the catering urn until you have switched off, removed the plug and drained off all the water.
8. Switch off, empty the water and allow the catering urn to cool before cleaning, ready to return to the hire company.
9. If your equipment does not work properly do not attempt to repair it. Contact the hire company.

Please keep this leaflet safely as it may be required for future reference



Hire Association Europe  
2450 Regents Court  
The Crescent  
Birmingham Business Park  
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600  
Fax: 44 (0) 121 333 4109  
Email: [mail@hae.org.uk](mailto:mail@hae.org.uk)  
website: [www.hae.org.uk](http://www.hae.org.uk)

v:042017

# Catering Urn

It is important to read this entire leaflet before using the Catering Urn

1. Plan the use of the catering urn so that it can always be used safely.
2. Electricity can be hazardous if misused – use it with care.
3. Electricity and water make a hazardous combination. Do not allow any electrical parts to get wet.
4. Boiling water will scald or burn instantly; ensure people use the urn with care.
5. Do not try to move this urn when full of water, it will be very heavy. If the water is hot or boiling it will be extremely hazardous.
6. Read and follow the safety labels attached to the equipment, they are there to warn of hazards.
7. Keep non-essential people, especially children, away from the area. Do not allow them to touch the catering urn - they may be scalded.
8. Switch off and unplug before leaving the catering urn unattended.
9. Switch off at the mains socket when not in use.
10. You should use a residual current device (rcd) to help protect against electrical hazards.
11. This catering urn must not be used by minors, or by anyone under the influence of drugs or alcohol.
12. Catering urns are designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

© Copyright Event Hire Association April 2012

Telephone: 44 (0) 121 380 4600  
Fax: 44 (0) 121 333 4109  
Email: [mail@hae.org.uk](mailto:mail@hae.org.uk)  
website: [www.eha.org.uk](http://www.eha.org.uk)

Hire Association Europe  
2450 Regents Court  
The Crescent  
Birmingham Business Park  
Solithull B37 7YE



1. Use a residual current device ("rcd") plugged directly in to the 230volt socket. Plug your equipment into the rcd. This will help to protect you against electric shock if the cable or equipment gets damaged.
2. Use the "TEST" button to check that the rcd is working each time you use it. Reset the rcd according to the instructions supplied with it.
3. Do not touch electrical switches or plugs unless your hands are dry.
4. Check on how the on/off switch operates. Before you switch the catering urn on, you must know how to control it.
5. Do not touch electrical switches or plugs unless your hands are dry.
6. Check on how the on/off switch operates. Before you switch the catering urn on, you must know how to control it.
7. Use a residual current device ("rcd") plugged directly in to the 230volt socket. Plug your equipment into the rcd. This will help to protect you against electric shock if the cable or equipment gets damaged.
8. Use the "TEST" button to check that the rcd is working each time you use it. Reset the rcd according to the instructions supplied with it.
9. Make sure that any extension cable connections are dry and safe.
10. Make sure there is enough water in the urn to at least cover the element not try to force connections or improvise them.
11. Check that the plug on your equipment matches your supply. Do not try to force connections or improvise them.
12. Stand the catering urn on a sturdy table or worktop; the outlet tap should overhang so that any water drips can be caught in a suitable container.
13. The urn should be located near a water supply and an electric socket but away from where people will congregate.
14. Protect other people from any danger. Put up a sign to warn people that the catering urn is hot.
15. Make sure that the catering area is clear and safe; do not allow others to distract you. Keep children and animals well clear.
16. Make sure that the catering area is clear and safe; do not allow others to distract you. Keep children and animals well clear.

## ELECTRICAL SAFETY



# Before Starting Work...